



U-CON Fuel System User Instructions

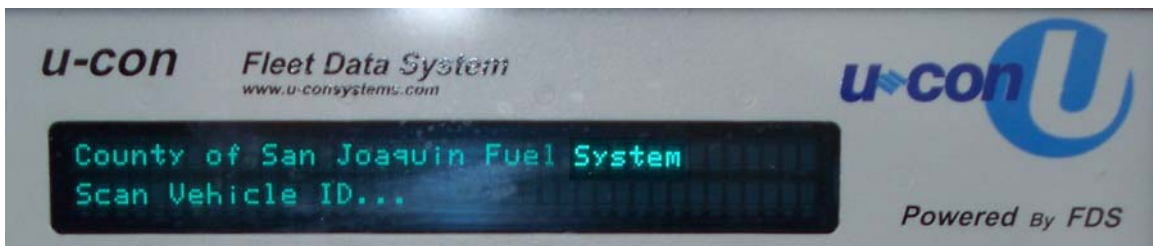

1. Note vehicle mileage before exiting vehicle
2. U-CON fuel station displays "scan vehicle key" insert fuel key into receptacle and hold for **3-5 seconds** until key is read




3. System will recognize key and identify vehicle. Display will request vehicle odometer reading, enter current odometer using keypad

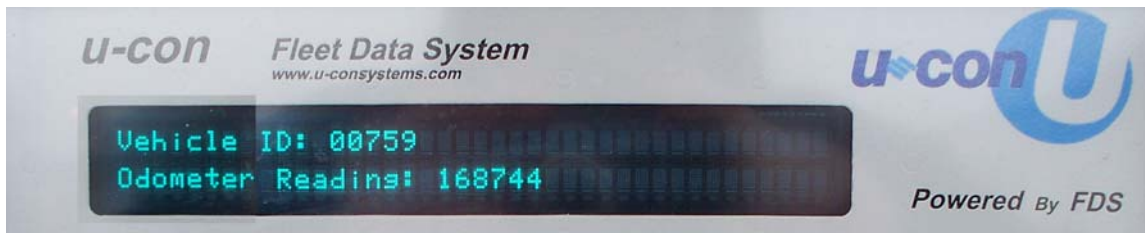

4. Screen may request odometer reading again if reading is outside of range, please re-enter odometer reading
5. Screen will then request user to select a fuel dispenser to authorize



6. Select appropriate dispenser and enter
7. Screen will prompt user to begin pumping fuel

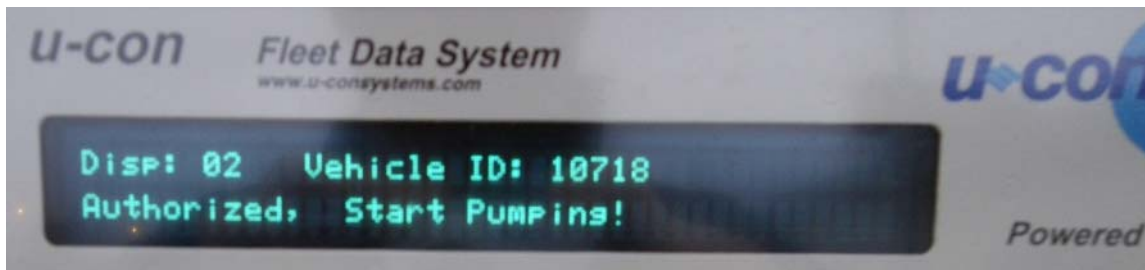

8. Remove fuel cap & nozzle, and begin fueling-
 - o Please note that up to a five-second delay may occur between turning dispenser lever on and fuel dispenser startup.
9. Replace nozzle and fuel cap after fueling is completed